

ClickPDU universal remote control FOR Mystery

Thank you for using our remote controller product. This remote controller can be used directly without setting after inserting batteries. If it could not work well. Please make setting with following methods. This remote controller has a memory function, there is no need to reset it after replacing the batteries.



Inputting code

1. Turn on your TV manually and make it in a normal play state, let the remote control aim to the front of your TV, and then find out the corresponding remote control code of your TV from the "Code Table"
2. Press "POWER" and "MUTE" button together, when the indicator light, then release, enter the corresponding code. The indicator will turn off, setting to be finished.
3. Test the functions (such as Volume button) can work well or not. If not, repeat step 2 until you find the suitable code.

Automatically searching code

1. Turn on your TV manually and make it in a normal play state. let the remote control aim to the front of your TV.
2. Press the "MUTE" button, and hold about 6 seconds, the indicator will flash, now the remote control turns to automatic search mode. When volume mark appear on your TV, release the button immediately, the indicator will turn off, setting to be finished.
3. Test the functions (such as Volume button) can work well or not. If not, repeat step 2 until you find the suitable code.

Restore to Factory Mode

Press "POWER" button and "0" button together, then release two buttons, the indicator will flash 3 times, the remote control restores to factory mode.

Technical parameters

Remote Controlling Distance: About 10 meters (varies by different types).
Battery Type: two pieces of AAA Batteries.

Русский

ClickPDU универсальный пульт для брендов Mystery

Благодарим за использование данного пульта дистанционного управления. Перед первым использованием данного пульта необходимо вставить батарейки. В случае правильной работы всех функций пульта, дальнейшая настройка пульта не требуется. В противном случае, для корректной работы пульта, необходимо будет произвести настройку, одним из способов, представленных ниже. Настройки пульта постоянно хранятся в памяти, поэтому после замены батареек повторную настройку пульта производить не нужно.

Ввод кода

1. Включите вручную телевизор, направьте пульт на телевизор и найдите соответствующий вашему TV пульт в «Таблице кодов»
2. Нажмите кнопки «POWER» и «MUTE» одновременно, когда индикатор загорится - отпустите обе кнопки. Введите соответствующий код. Индикатор погаснет - настройка завершена.
3. Проверьте функции (например кнопки регулировки звука). Если эти кнопки не работают, то повторите пункт 2, пока не найдёте подходящий код.

Автоматический поиск

1. Включите телевизор вручную, и направьте пульт на телевизор.
2. Нажмите кнопку «MUTE» и удерживайте нажатой, индикатор заморгает. Теперь пульт находится в режиме авто-поиска. Когда на TV появится шкала регулировки громкости, отпустите кнопку «MUTE». Индикатор погаснет, настройка завершена.
3. Проверьте функции (например кнопки регулировки звука). Если эти кнопки не работают, то повторите пункт 2, пока не найдёте подходящий код.

Восстановление заводских настроек


Одновременно нажмите кнопки "POWER" и "0", индикатор мигнет три раза. ПДУ вернется к заводским настройкам.

Технические параметры

Дальность действия пульта: до 10 метров, в зависимости от модели пульта.
Тип элементов питания: 2 батарейки AAA.

B0066044

001	001	001	001	001	002	002	003	003
								
MTV-4034LTA2	MTV-3224LT2 REC	MTV-3224LT2	MTV-4331LTA2	MTV-3229LTA2	MTV-3227LT2	STV LC32T880WL	KT1045 MTV-2622LW	KT1045 MTV-2622LW
004	005	005	006	007	007	008	009	009
								
RC-801BB-Mouse	RL-32L700U	RC-A06	MTV-3226LWI	RC3000E	RC3000E02 RC2000E02	CX-507	HOF10J348GPD9	HOF50D12
010	010	011	012	013	014	015	016	
								
RC-1529 LCD TV	MTV-1914LW (RC-3229)	MTV-770, MTV-970	1CE3	CGE-111, RC-38	MTV-1912LW	MTV-3214LW (RC2465)	LCD NEW TO-068	

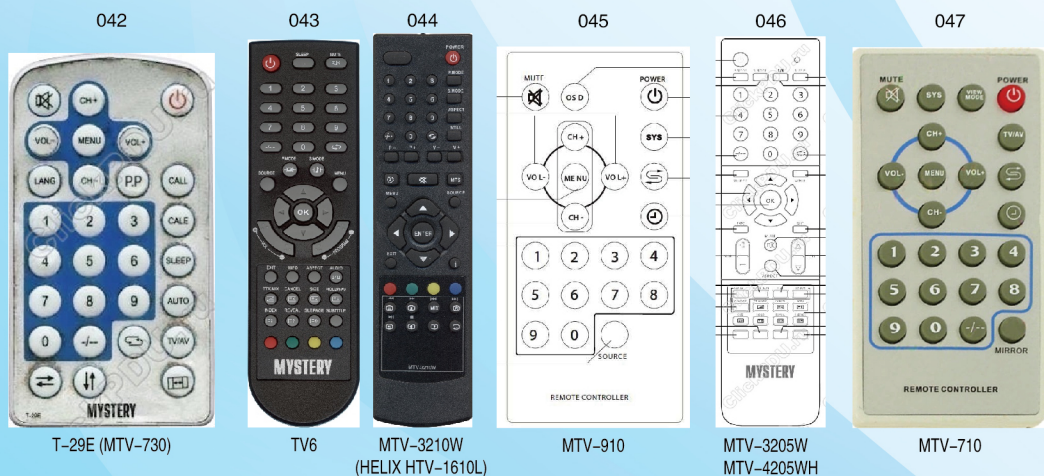

КАТАЛОГ ЗАМЕНЯЕМЫХ ПУЛЬТОВ